



SENTINELLE

Mini


———— Application Guide ————



Welcome


to Sentidrive's community !

Sentidrive is available for iOS (Apple Store) and Android (Google Play):

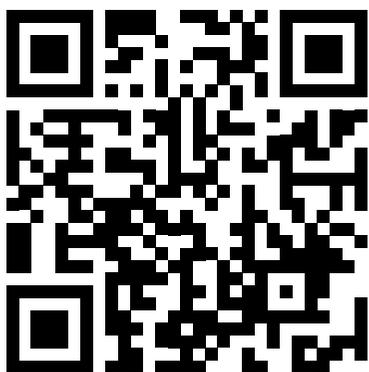




Registration by the application

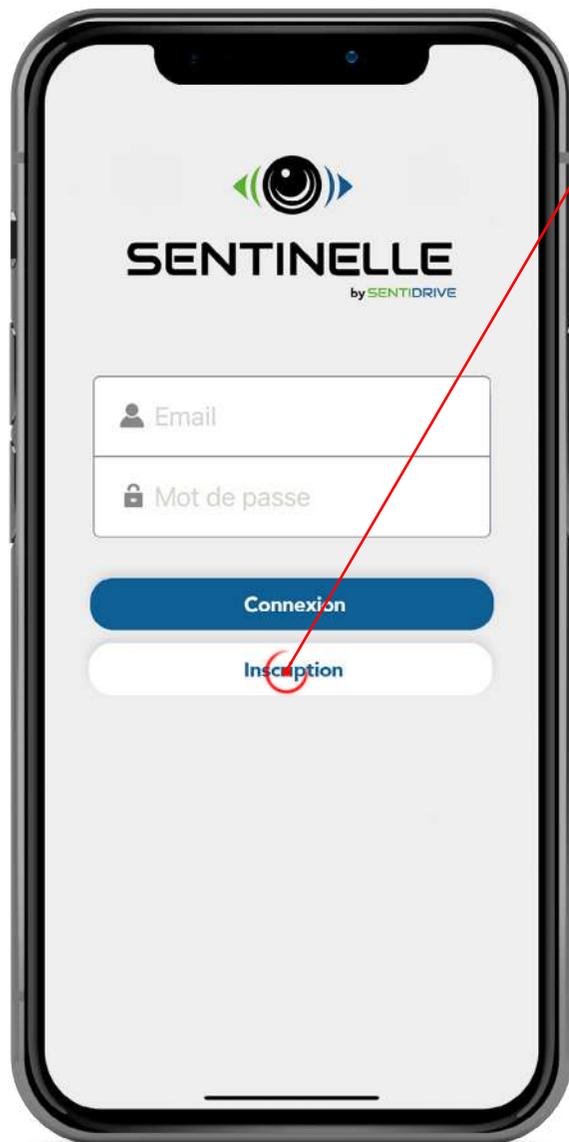

Sign up.

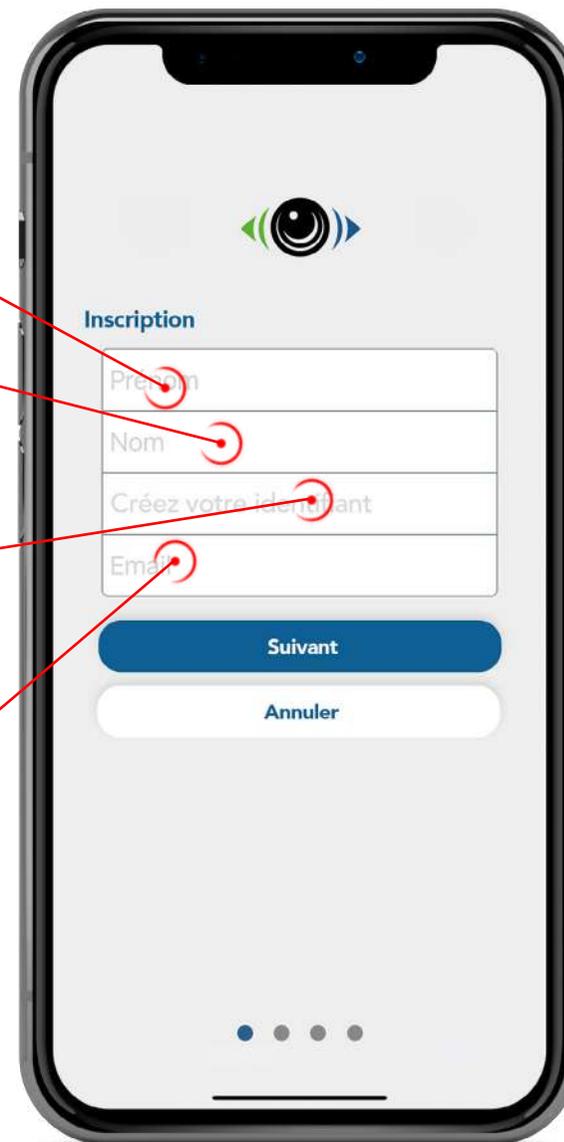

Please enter your name.

Please enter your forename.

Create your connection ID :
This is the identifier you will use
to connect to your account.

Enter a valid Email.



Registration Information

Create your connection password.
This password will be used to
access your user account.

The image shows a smartphone screen with a registration form. At the top is the company logo. Below it, the text reads 'Renseignez un mot de passe de 8 caractères'. There are two input fields: 'Mot de passe' and 'Confirmation'. A red line connects the left text to the 'Mot de passe' field, and another red line connects the right text to the 'Confirmation' field. Below the fields are two buttons: 'Suivant' (Next) and 'Précédent' (Previous). At the bottom of the screen, there are four dots, with the second one from the left being filled, indicating the current step in the process.

Please confirm your
password choice above.



Registration Information

Get your phone number.
This number must be valid and belongs to the owner of the Sentinelle : it will be used to notify you in case of alarm.
A confirmation SMS is sent to the confirmed number after validation.

The image shows a smartphone screen with the Sentidrive logo at the top. Below the logo, the text reads "Renseignez un numéro de téléphone valide". There is a phone number input field with a dropdown menu showing "+33" and a red circle highlighting the first digit "6". Below this, the text says "Nous venons de vous envoyer un code de validation par SMS". There are four empty input boxes for a 4-digit code, with a red circle highlighting the first box. At the bottom, there are two buttons: "Suivant" (Next) in a blue rounded rectangle and "Précédent" (Previous) in a white rounded rectangle. At the very bottom of the screen, there are four dots, with the third one being blue, indicating the current step in a sequence.

Fill in the 4-digit validation code received by SMS.
You can receive this validation code within 1 minute.



Registration Information



After reading the data protection policy, please tick the box «I have read and I accept» in order to validate your registration.



Register your Sentinelle

Fill in the serial number of your Sentinelle Mini. (see S/N serial number slot)

The image shows a smartphone screen with the following content:

- Logo at the top center.
- Title: **Enregistrement de votre équipement**
- Text: *Munissez vous du Quick Start Guide présent dans la boîte du produit*
- Form fields:
 - S/N Number**: A text input field with a red circle highlighting the input area.
 - ID Key**: A text input field with a red circle highlighting the input area.
- QR code: A QR code located to the right of the S/N Number field, with a red circle highlighting it.
- Buttons:
 - Suivant**: A blue button below the form fields.
 - Précédent**: A white button with a blue border below the 'Suivant' button.

Possibility to scan the QR code. (see S/N serial number slot)

Fill in the identification key 4-digit on the back of the Quick Start Guide.



Sentinelle information

Add a name to your Sentinelle Mini. This name will appear in alert notifications in order to identify the vehicle concerned.

Ces informations nous permettent d'identifier votre véhicule plus rapidement en cas de vol ...

Nommer votre Sentinelle

Marque du véhicule

Cylindrée

Modèle du véhicule

Immatriculation

Année de mise en circulation

N° chassis

Couleur principale

Couleur secondaire

Autre couleur

Suivant

Précédent

Add the vehicle information associated with your Sentinelle Mini. In the event of theft, this information allows us to identify the vehicle more quickly.




Sentinelle information

Add photos of the vehicle.
They will be kept on your personal
space.





Account information & equipment list

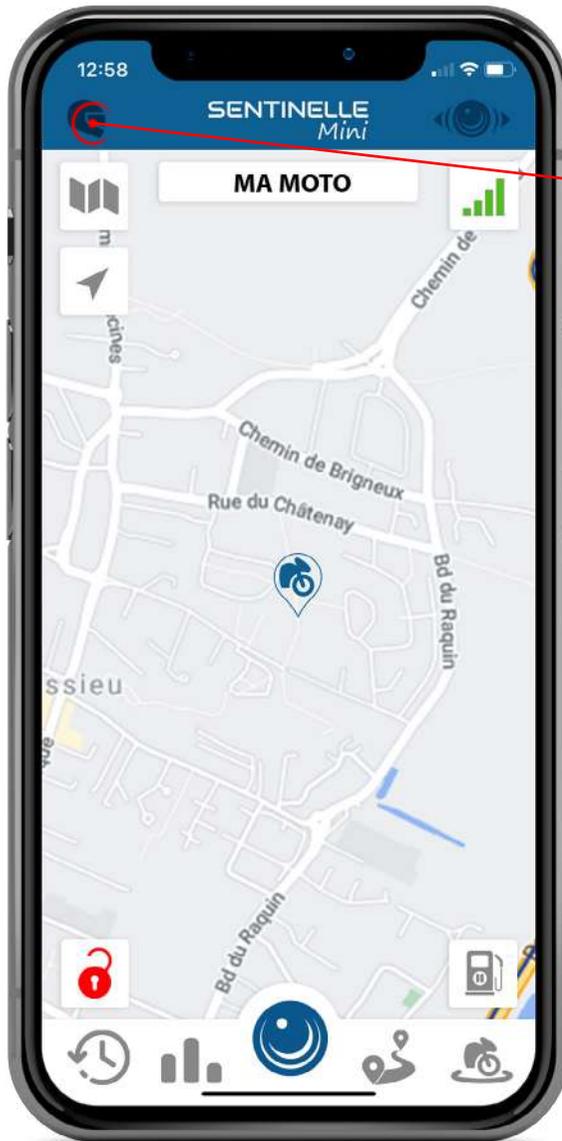


Quick access to equipment/user information.

User Information:
In the event of a request for assistance from the Sentidrive teams, you will be asked for this information.


Device information linked to the user account.

Associate a new device with your user account.

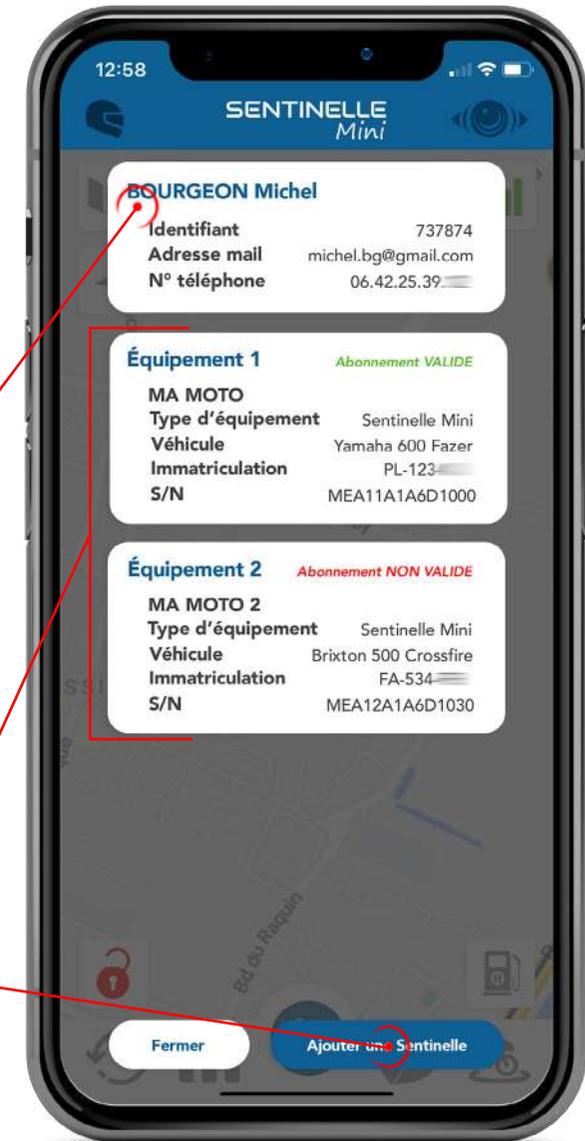



Dashboard

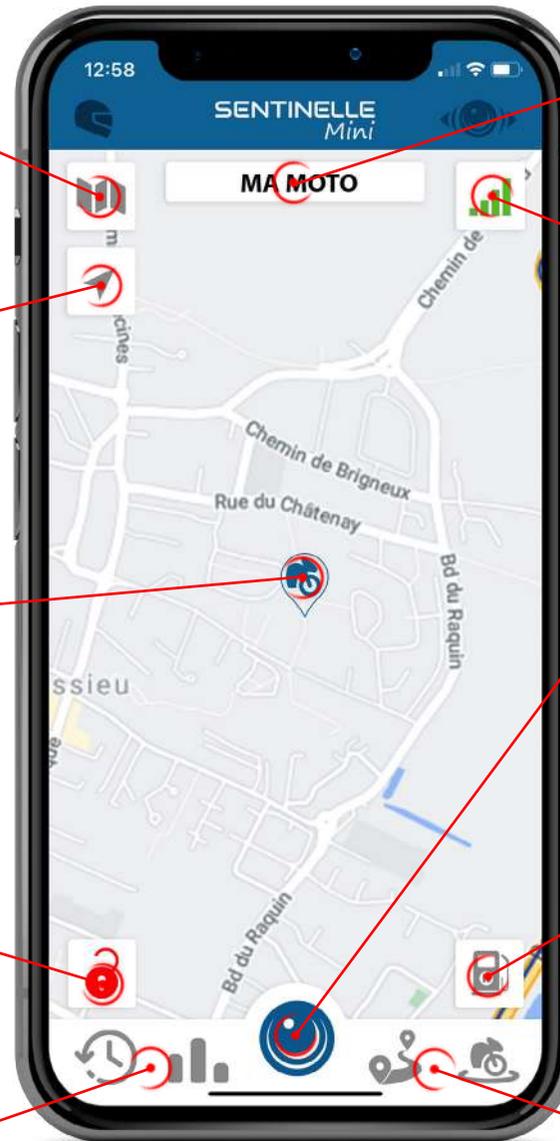

Change the display mode:
Map / Satellite

Refocus the position of your
equipment.

Position of your equipment.

In order to identify your equipment
more quickly, you can click directly
on the blue marker to display its
name and serial number.

Enabling/Disabling the vibration
monitoring.
If the feature is disabled, in the
event of an attempted theft, you
do not will not be alerted.

Main menu.

If more than one device is
available, select the desired
equipment.

Displays the connection status of
the device.


Go to your main menu.

Turn on gasoline mode so that
vibration detection temporarily
turns off.
Vibration detection will
automatically reactivate after 10
minutes.


Main menu.



Geolocate your two-wheeler

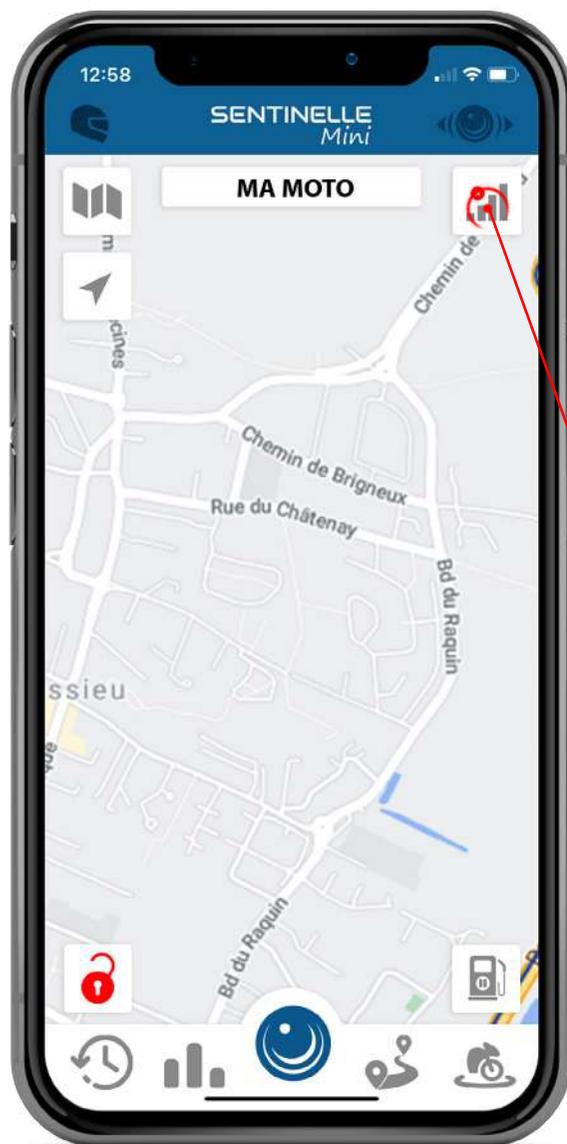


If the connection is «Out of line», click to get information on the last position.

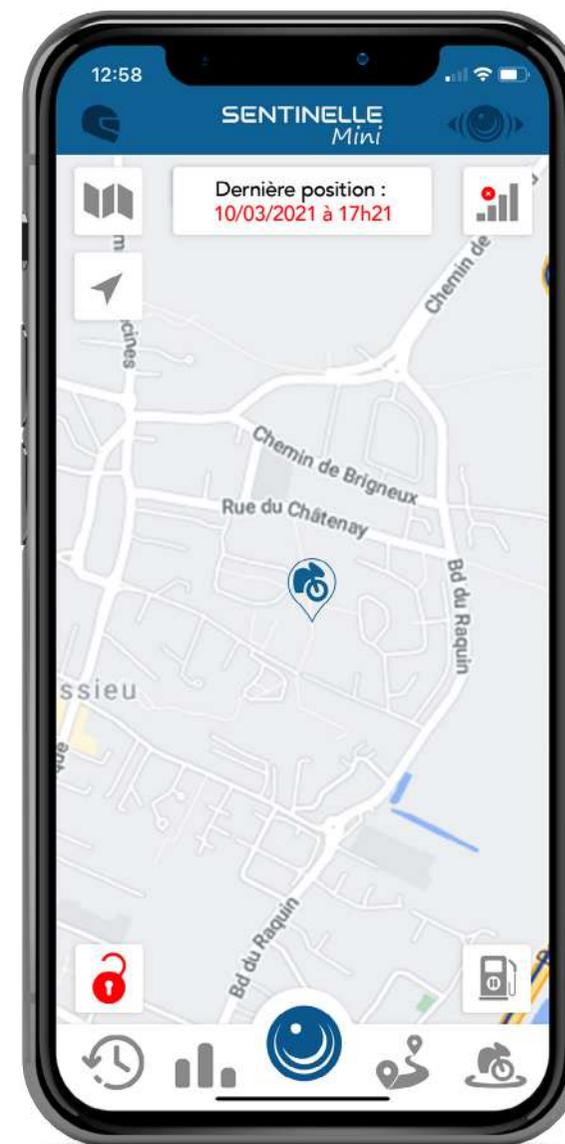



Main menu

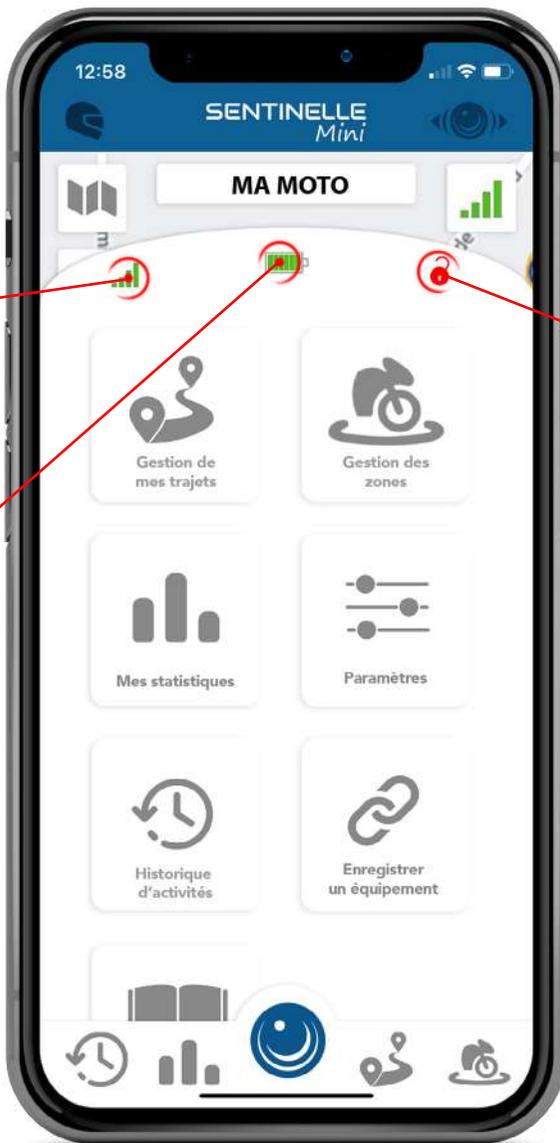

The connection status of the device to the server.

Parking alarm status.


- 🔒 Disabled
- 🔒 Activated

The status of the equipment's internal battery.




PROCHAINEMENT

Quick menu settings

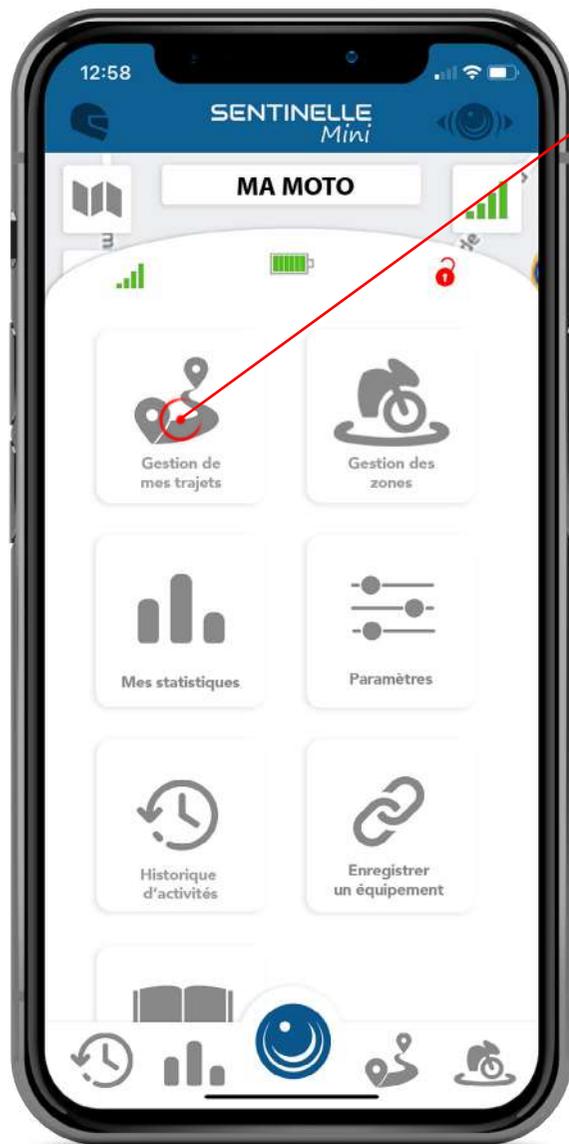

Change the configuration of your quick menu by pressing one of the icons in the main menu.


Tap the icon **+** to add to the quick menu.

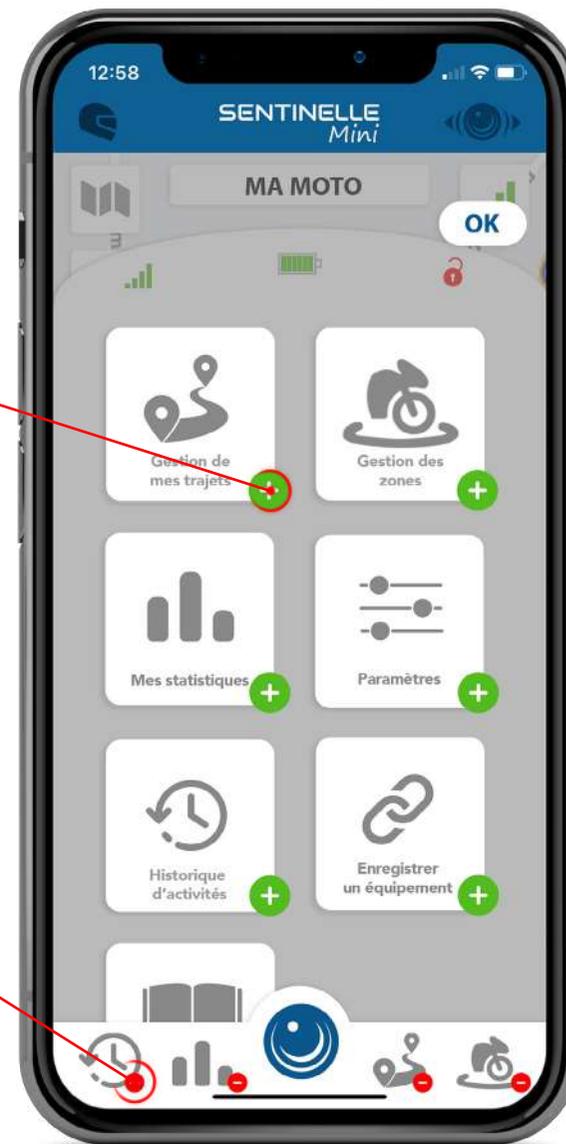

Tap the icon **-** to remove from the quick menu.




Your Trips

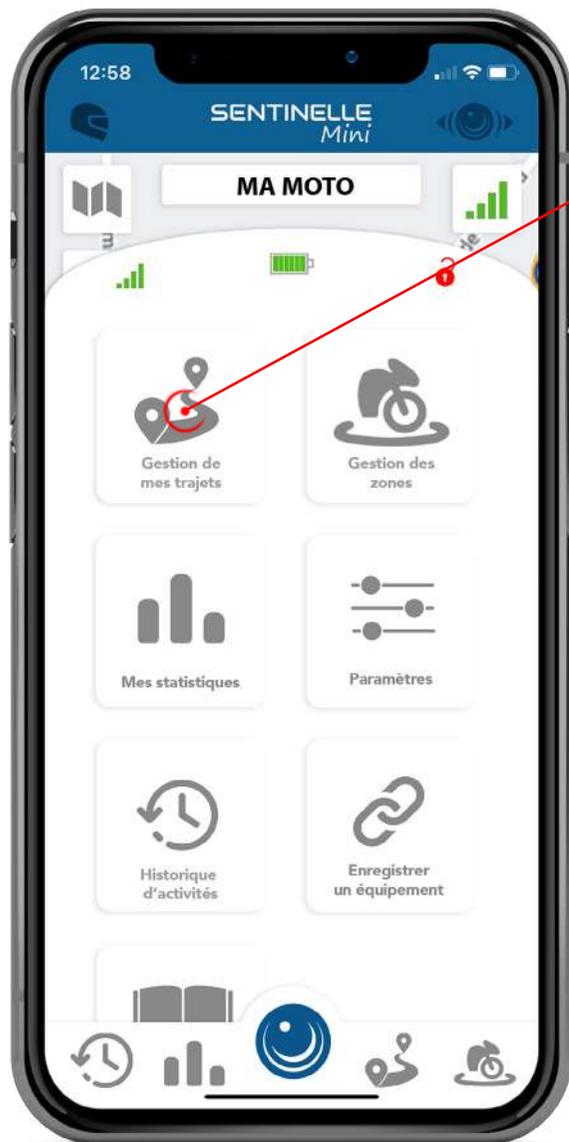

Access your trips.


Search for a trip by:
day / week / month

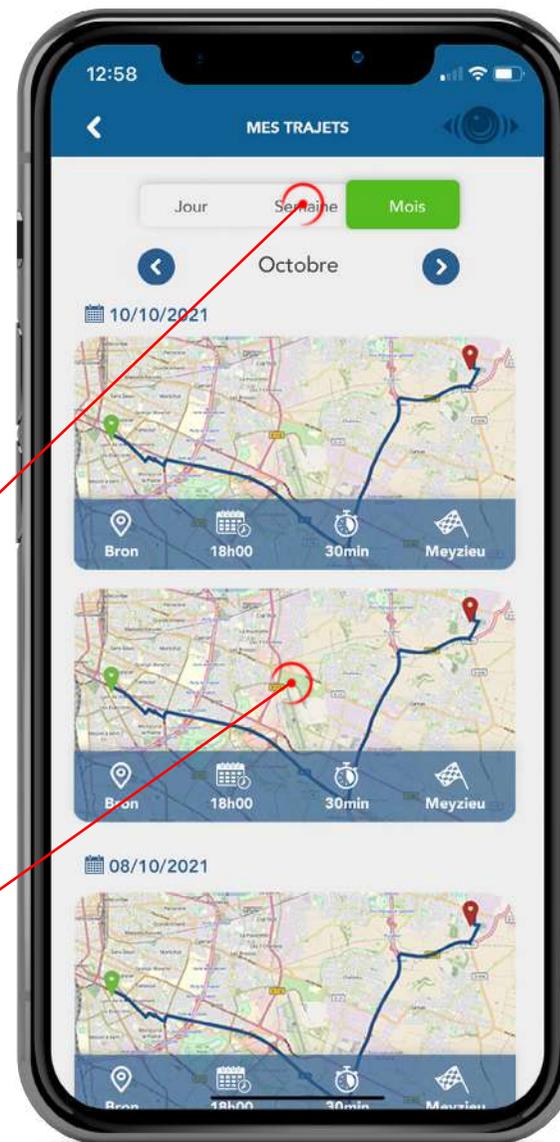

Select your trip to access the details of the information. In order to facilitate your search, we display the city of departure, the city of arrival as well as the distance traveled and the time of the trip made.




Your Trips

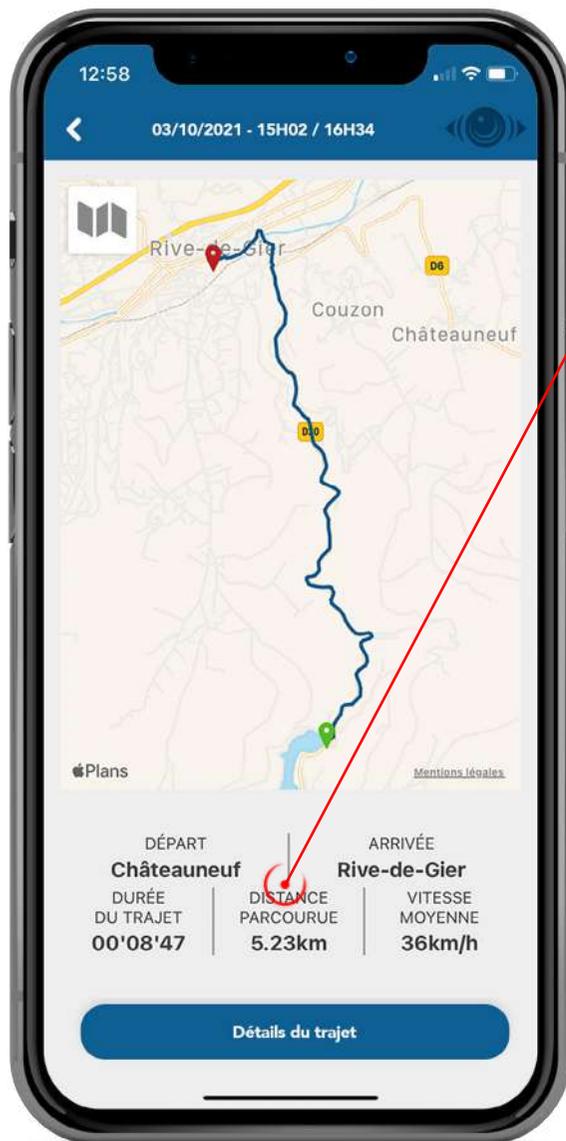


Find the detailed information of your trip as well as the course completed.

Move the slider from left to right to relive your trip. The icons on either side of the navigation bar give you point-by-point accuracy.

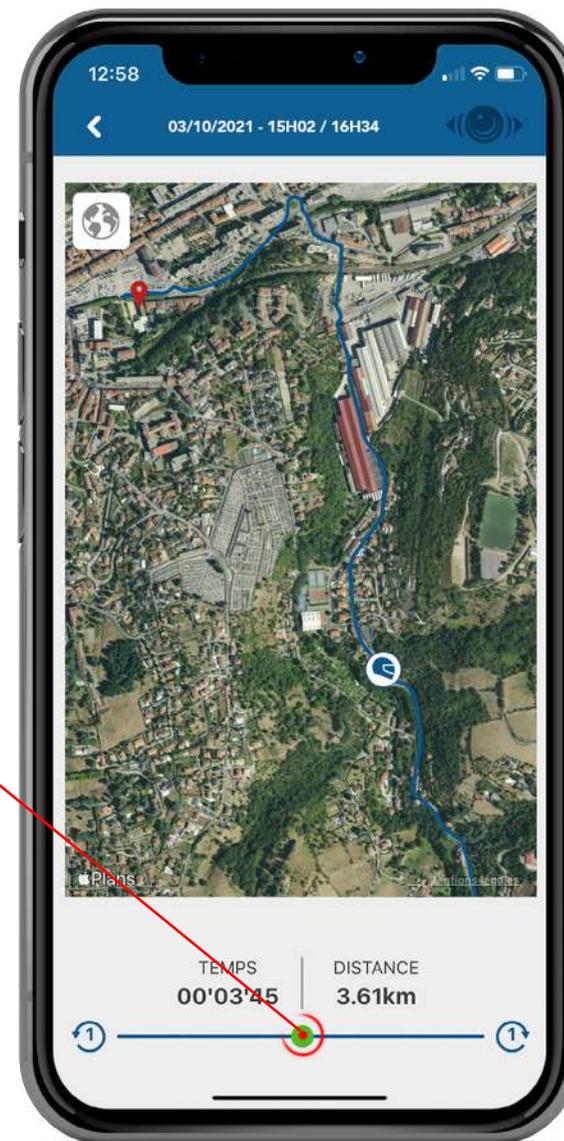



Your Trips

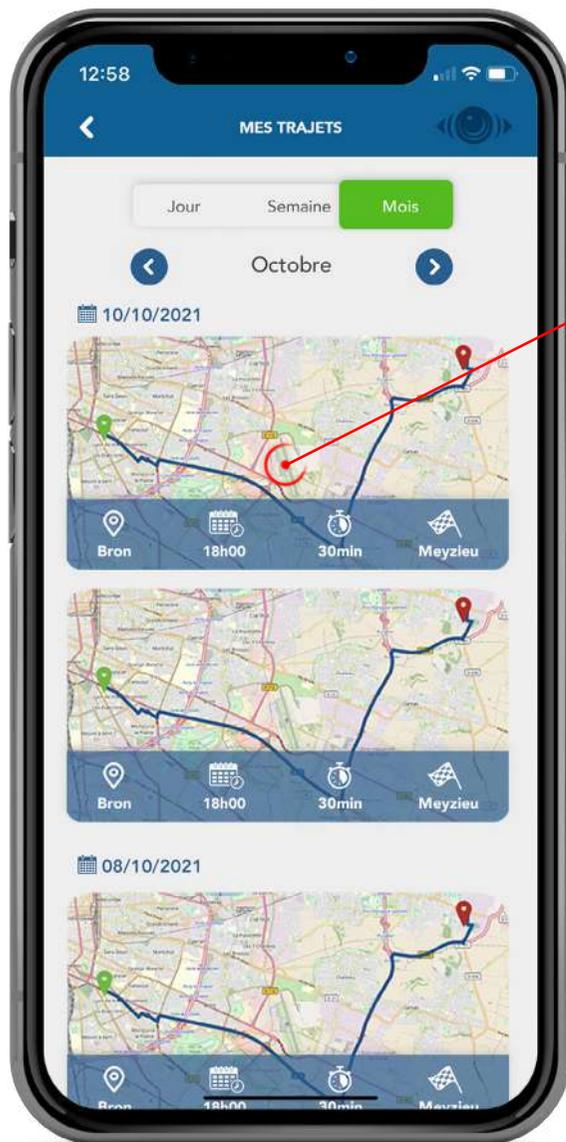


In order to delete multiple files, stay pressed on a trip and then select your trips to delete.





Your zone management

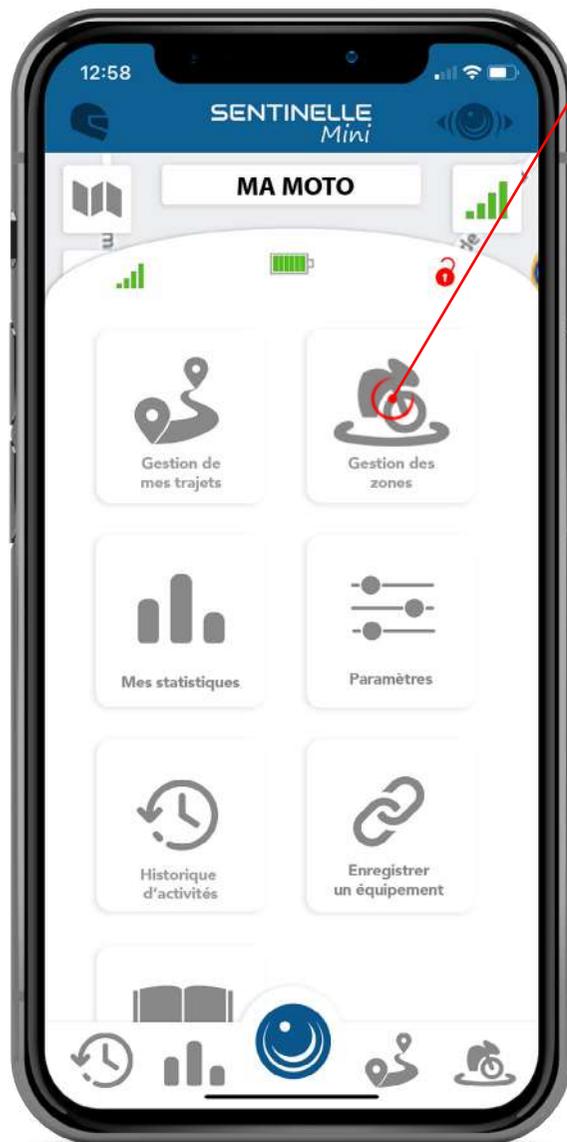

Access your alarm areas.

The name of the defined zone.

The address of the defined area.

Enabling/Disabling the zone.

The size of the defined area.

Edit or delete the zone.

Add a zone.






Your zone management

The image shows a smartphone screen displaying the 'GESTION DE ZONES' app. The interface includes a search bar at the top, a slider to adjust the zone radius (100m to 5000m), a map with a blue circular zone centered on a location, and a bottom panel for zone configuration. Red lines connect text annotations to specific UI elements.

- Center the area on a specific address.
- Reduce the radius of the area by 100 meters with each click.
- Manage the size of your area directly with the slider.
- Center the area on the position of your motorcycle.
- Creating your zone.
- Increase the radius of the area by 100 meters with each click.
- Definition of the zone.
- Change the name of the zone.
- Enable zone entry alarms.
- Enable zone exit alarms.



Your statistics

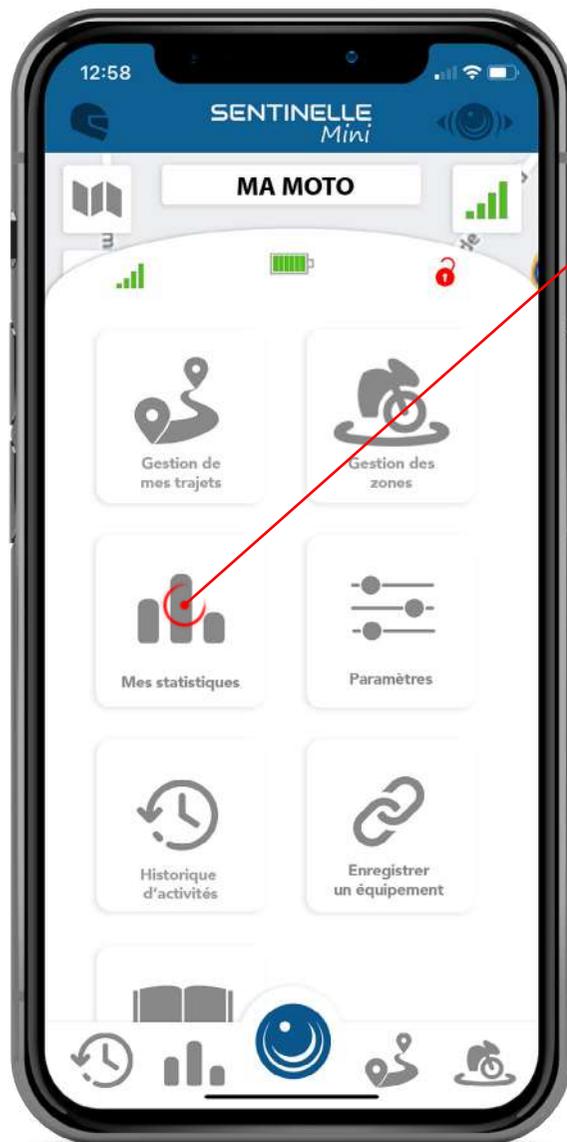


Access your statistics.

View your data by :
week / month / year





Activities history

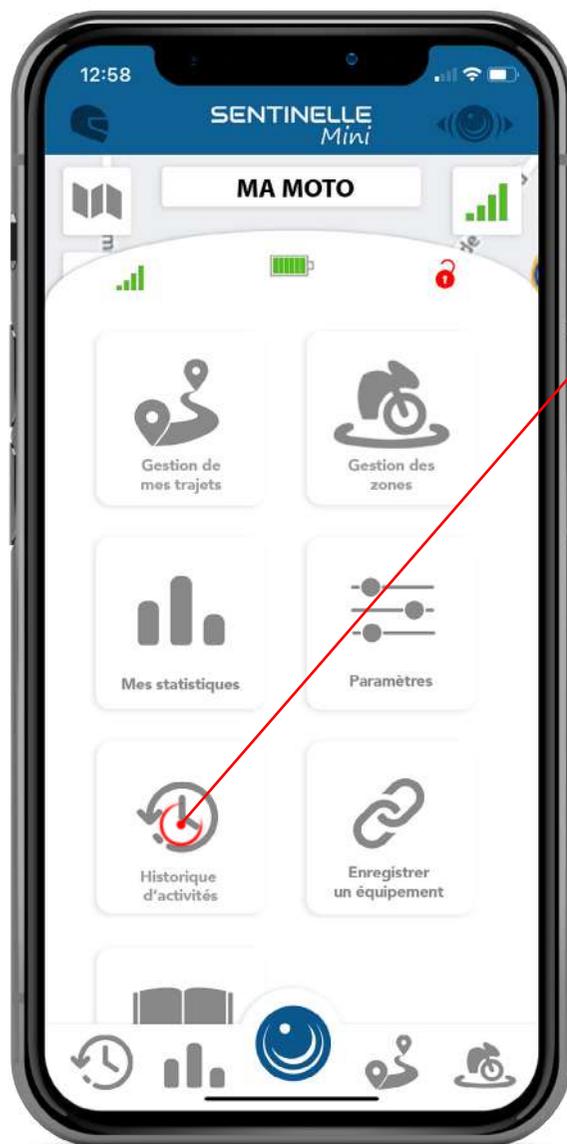


Access to the activity and alert history of your Sentinelle.



Access to a specific date.



Settings

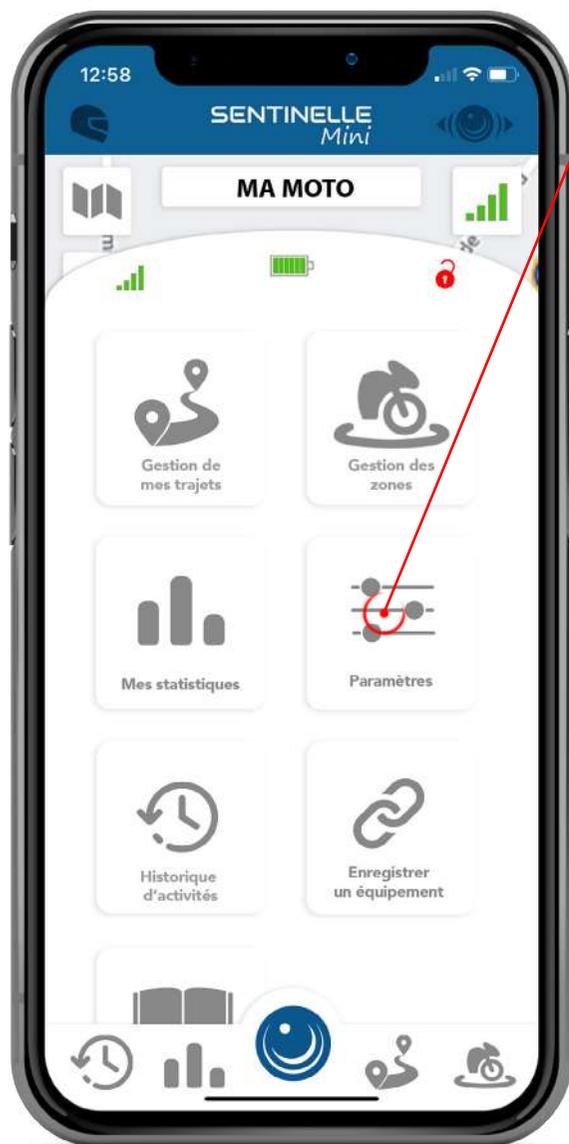

Access settings.


Access your personal information.

Access your subscription.

Access your equipment.

Access your general settings.

Access your device settings.

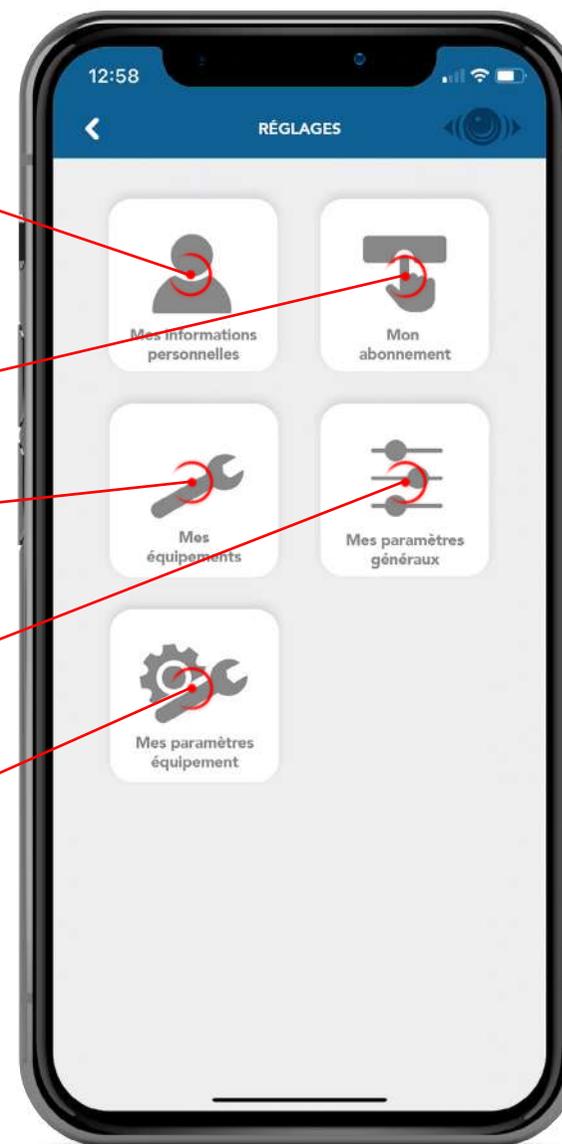



PROCHAINEMENT

Settings - my personal information




Edit your personal information.



Settings - my subscription

Information about your subscription.

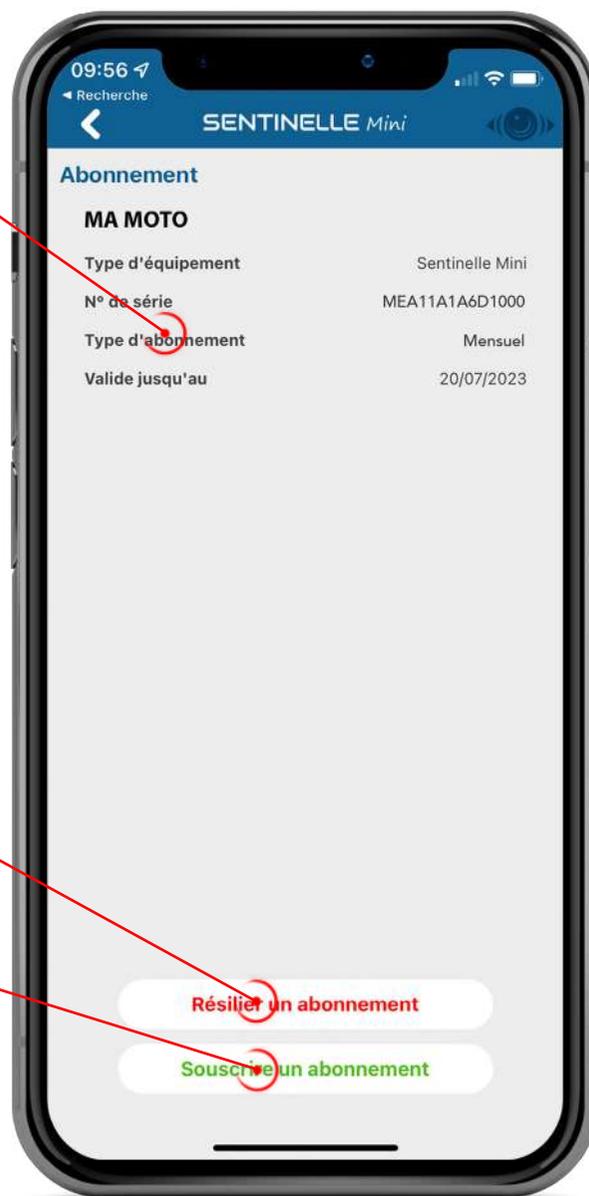

Access the request to cancel your subscription.

Access the subscription.



Settings - my equipment



If more than one device is available, select the device you want to view.

Edit the characteristics of your equipment.

Free up your equipment. You will be redirected to a form to release it permanently.



Settings - my general settings




Change the language of your app.



Settings - my equipment settings

Automatic mode


The yellow «ACC» wire of your equipment must be connected to a 12 Volt after contact.
Your Sentinelle Mini will operate according to the status of your vehicle (ignition on/off).

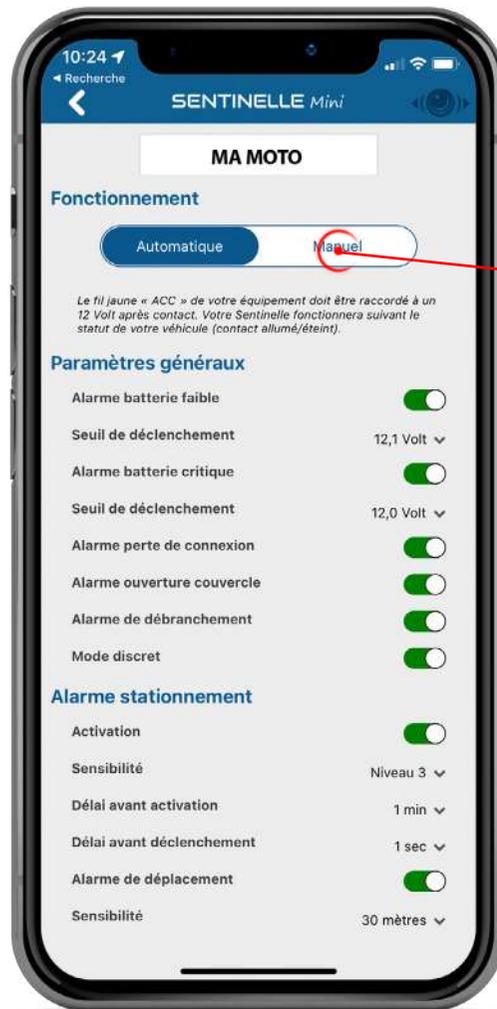

Choice of automatic or manual mode.

Manual mode

The disarming of your Sentinel Mini must be done from the application before using your vehicle. The arming can be manual or automatic depending on the settings.

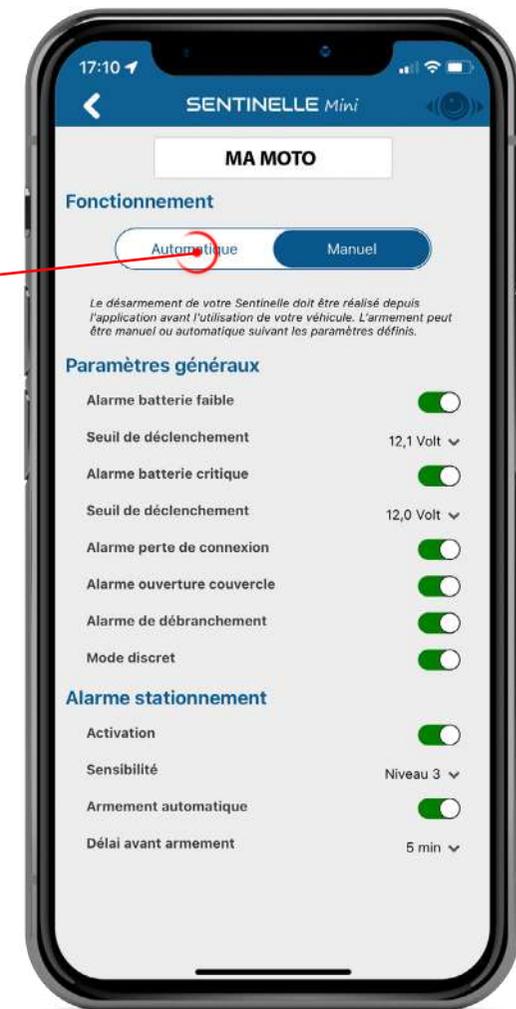



Settings - my equipment settings

Automatic mode

If more than one device is available, select the device you want to view.

Choice of automatic or manual mode.

Enabling/disabling the disconnection alarm. The alarm is triggered if the Sentinelle Mini loses its general power (+ / - of the vehicle battery).


Enabling/disabling discrete mode. If the discrete mode is activated, the operating status of the equipment (colored LEDs) is not visible.

Enabling/disabling the alarm parking.

Alarm trigger sensitivity parking.

On detection of a vibration, delay before sending the parking alarm. Starting the vehicle during this period cancels the triggering of the alarm.

Sensitivity of triggering the displacement alarm.

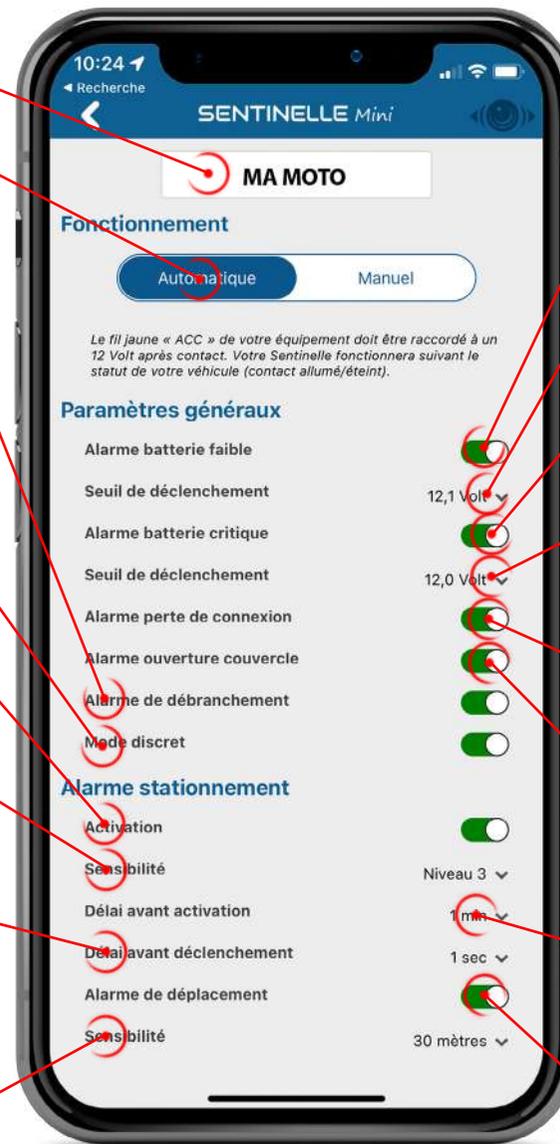

Enabling/disabling the sending of the «low battery» notification. This alarm is triggered when the voltage of your vehicle is below the set trigger threshold.

Threshold for triggering the «low battery» alarm.

Enabling/disabling the sending of the «critical battery» notification. This alarm is triggered when the voltage of your vehicle is below the set trigger threshold.

Threshold for triggering the «critical battery» alarm.

Enabling/disabling the sending of the «loss of connection» notification. This alarm is triggered when your Sentinelle Mini no longer communicates with the Sentidrive server.

Enabling/disabling the opening alarm of your Sentinelle mini (top cover).

After switching off, delay before activating vibration monitoring to trigger the parking alarm.

Enabling/disabling of the vehicle's movement alarm.



Settings - my equipment settings

Manual mode

If more than one device is available, select the device you want to view.

Choice of automatic or manual mode.

Enabling/disabling the disconnection alarm. The alarm is triggered if the Sentinelle Mini loses its general power (+ / - of the vehicle battery).

Enabling/disabling discrete mode. If the discrete mode is activated, the operating status of the equipment (colored LEDs) is not visible.

Enabling/disabling the alarm parking.

Alarm trigger sensitivity parking.

Enabling/disabling of the automatic vehicle arming

Time period during which the vehicle must not be in motion before the system rearms



Enabling/disabling the sending of the «low battery» notification. This alarm is triggered when the voltage of your vehicle is below the set trigger threshold.

Threshold for triggering the «low battery» alarm.

Enabling/disabling the sending of the «critical battery» notification. This alarm is triggered when the voltage of your vehicle is below the set trigger threshold.


Threshold for triggering the «critical battery» alarm.

Enabling/disabling the sending of the «loss of connection» notification. This alarm is triggered when your Sentinelle Mini no longer communicates with the Sentidrive server.

Enabling/disabling the opening alarm of your Sentinelle mini (top cover).




Equipment registration

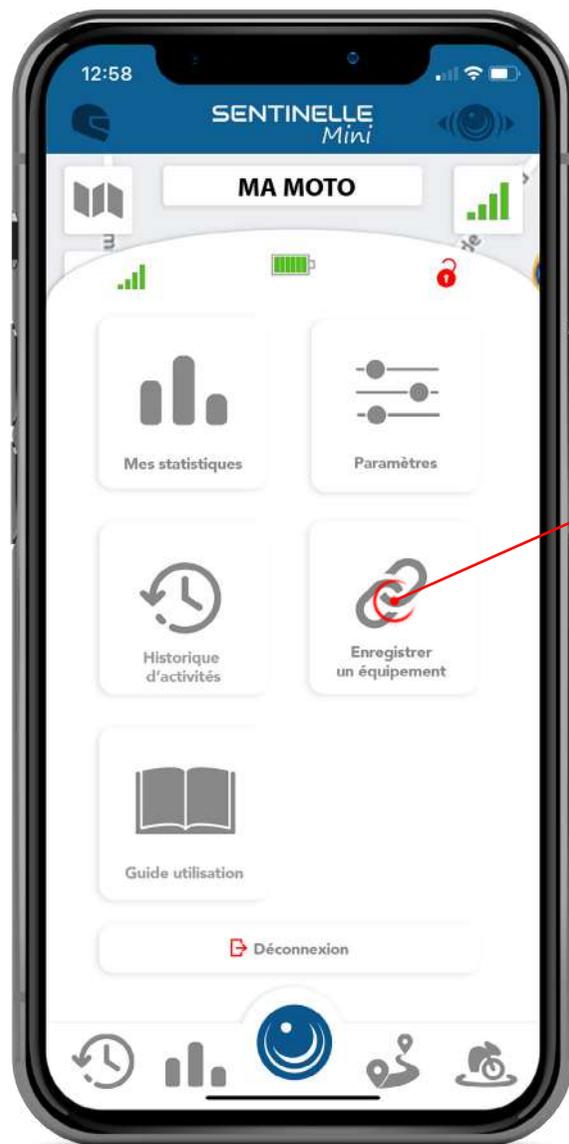

Associate a new device with your user account.



User Guide

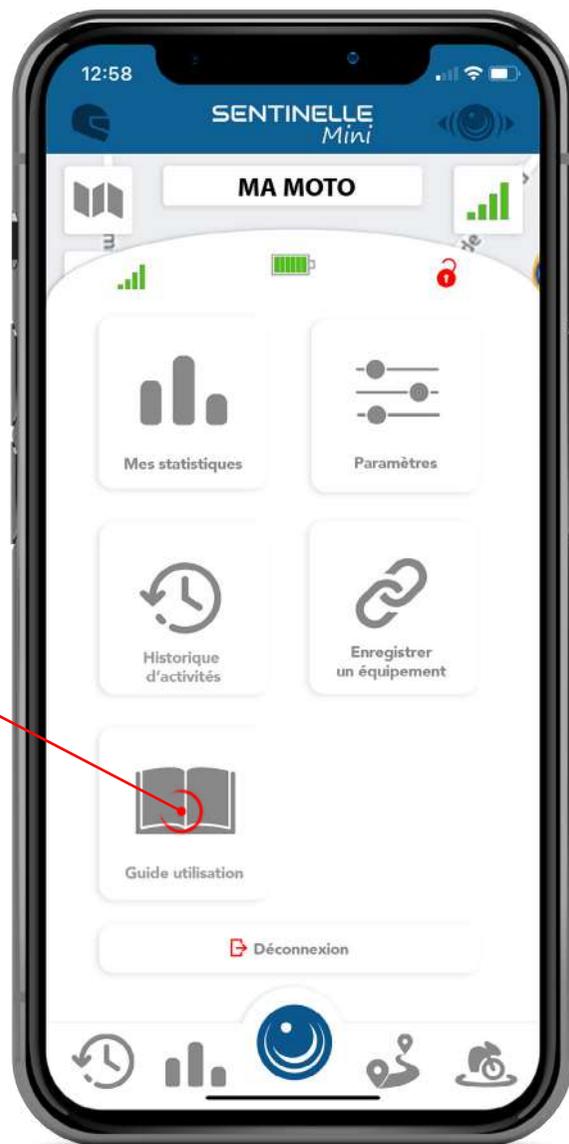

Access the user guide directly from the app.




Alarms & Alerts



Theft Alert

Position of your vehicle.
When a vibration is detected, your vehicle is geolocated every second during 60 seconds.
If it is moved, the geolocation will be continuous until the vehicle comes to a complete stop.
The system will then switch back to standby while waiting for the next tremor.

If the potential danger is ruled out, raise the alert.

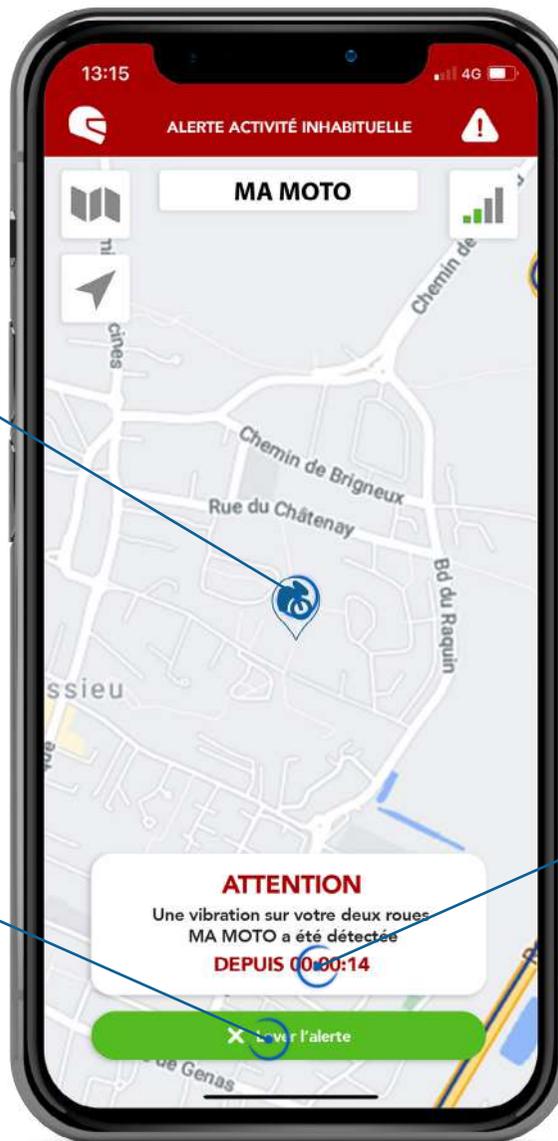

Time since vibration detection on your vehicle.



Other Alerts

SENTIDRIVE Maintenant

Déplacement détecté
Un déplacement sur votre véhicule MA MOTO a été détecté.

Cause : Displacement detected.

SENTIDRIVE Maintenant

Sortie de zone
Votre véhicule MA MOTO est sorti de la zone « ZONE 1 ».

Cause : Exit of the vehicle from the predefined zone «ZONE 1».

SENTIDRIVE Maintenant

Entrée de zone
Votre véhicule MA MOTO est entré dans la zone « ZONE 1 ».

Cause : Entry of the vehicle into the predefined zone «ZONE 1».

Cause : Disconnection of the vehicle battery of the red or black wire of the power module of your Sentinelle or power cut off (vehicle battery no longer providing any energy at all).

SENTIDRIVE Maintenant

Votre Sentinelle n'est plus alimenté
Veuillez vérifier le raccordement de votre Sentinelle MA MOTO à la batterie.

SENTIDRIVE Maintenant

Ouverture couvercle
Veuillez vérifier la fermeture du couvercle de votre Sentinelle MA MOTO.

Cause : The cover of your Sentinelle MA MOTO is open, this can lead to problems with the sealing of the equipment and interfere with its proper functioning.



Other Alerts

SENTIDRIVE Maintenant

Batterie faible
Batterie faible détectée sur votre véhicule MA MOTO.

Cause : The tension of your the vehicle is below the set trigger threshold.

Cause : The tension of your the vehicle is below the set trigger threshold.

SENTIDRIVE Maintenant

Batterie critique
Batterie critique détectée sur votre véhicule MA MOTO. Rechargez votre batterie rapidement.

SENTIDRIVE Maintenant

Batterie interne faible
La batterie de votre Sentinelle MA MOTO est faible. Votre équipement risque de s'éteindre.

Cause : The battery of the equipment is almost discharged because no external power supply is present. The equipment may turn off. Your vehicle will no longer be protected.

Cause : Your Sentinelle does not communicates more with the Sentidrive server as no 2G/4G network available (example : underground garage, white area).

SENTIDRIVE Maintenant

Perte de connexion
La connexion de votre Sentinelle MA MOTO au serveur est interrompue.

SENTIDRIVE Maintenant

Connexion retrouvée
La connexion de votre Sentinelle MA MOTO au serveur est retrouvée.

Cause : Your Sentinelle is communicating with the Sentidrive server again.



For any technical questions, the Sentidrive
team remains at your disposal :
support@sentidrive.com

www.sentidrive.com